


3. Verwendungsbereich

Der PreView Side Defender® II ist zum Einbau in Fahrzeugen der Klassen M1, M2, M3, N1, N2 und N3, insofern das unter Pkt. 2.7 u. 2.9 genannte Anbringungsfenster eingehalten werden kann. Die Montage muss gemäß mitgelieferter Montage- und Betriebsanleitung durchgeführt werden.

Dieses Gutachten erfasst auch Systeme für Fahrzeuge mit einer zulässigen Gesamtmasse bis zu 3,5 Tonnen (M1 und N1). Für einen Einbau in solche Fahrzeuge entfällt die Möglichkeit der Förderung.

Side Defender® II Sensor Placement Guide

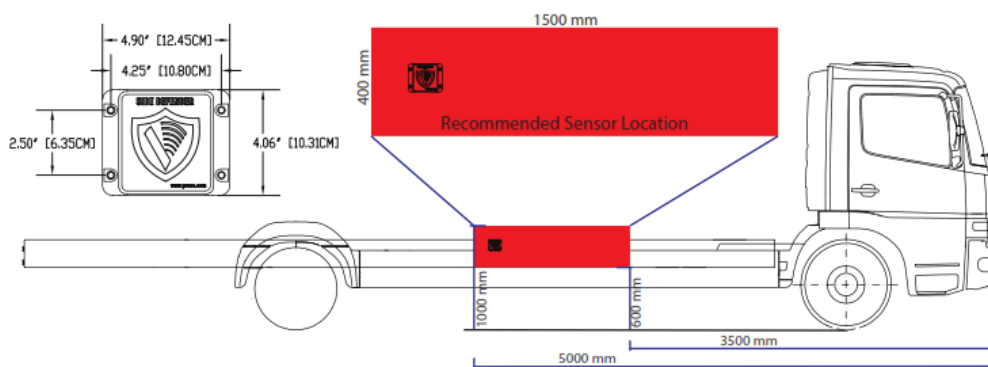

The entire Side Defender II Radar sensor should be inside the Recommended Sensor Location box.
3.5 to 5 m (137 to 197") back from the front bumper
600 to 1000 mm (23 to 39") above ground level

IMPORTANT: The correct mounting of the sensor is required to achieve proper performance. Select an installation point that is rigid to the vehicle frame. A bracket or rigid support extension may be required. Installation should take place on level ground. Ensure the mounted sensor is within the mounting variances shown below.

